



Kodak S100 EF Front Cover Replacement

This will guide in taking off the front cover to get inside the Kodak S100 EF.

Written By: Michelle



INTRODUCTION

 
Use this guide to replace the front cover.



TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Front Cover

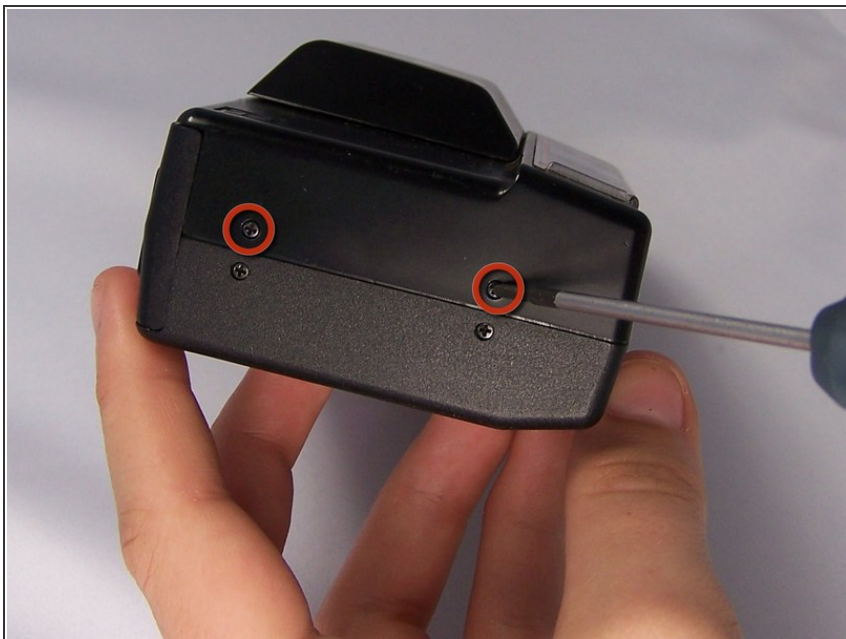

- ⓘ Have the camera facing up and the flash closest to you.
- Unscrew the two 6.2 mm Phillips screws on the top half of the camera.

 Step 2

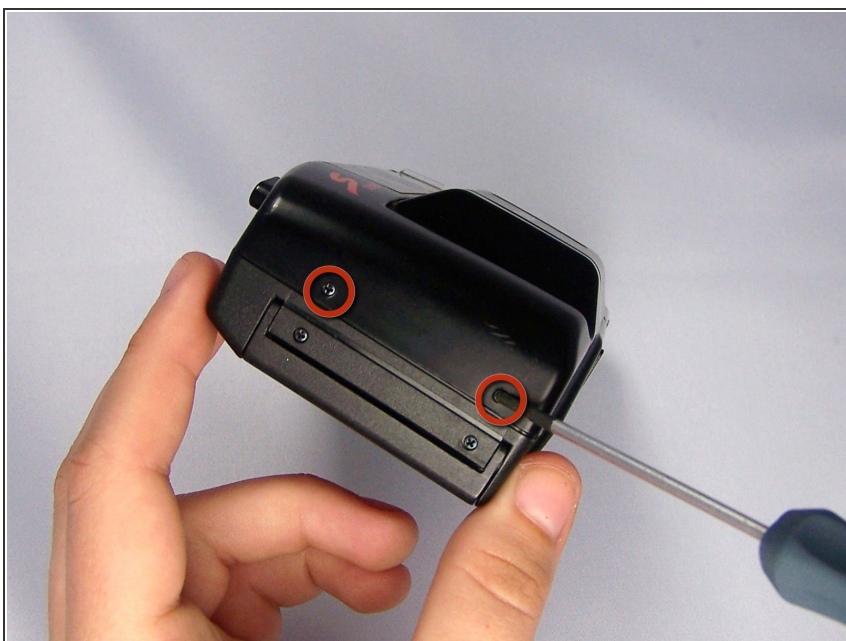

- ⓘ Flip camera to other side-with flash farthest from you.
- Unscrew top two 6.2mm Phillips screws on this side.

Step 3



- ① Turn the camera so the bottom is facing up with the front facing away.
- Unscrew the 6.2mm Phillips screw on the top right.
- The front cover is now unscrewed and should be lifted up evenly and removed.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 08:12:09 PM.